

INSTALLATION INSTRUCTION 1754-206 1755-206 1756-206
For Flush Mount Ceiling Fixtures

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

MOUNTING THE FIXTURE

1. Shut off the power at the fuse box or circuit breaker box. Remove the old fixture from ceiling, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Thread the two Mounting Screws (A) about 1/4" into the pre-drilled holes in the Crossbar (B) spaced the same distance apart as the holes in the pan (E).
4. Attach the crossbar (B) to the outlet Box using the two screws (C) from the outlet Box. The side of the crossbar marked "GND" must face out.
5. Hold the fixture (D) and pan (E) towards the crossbar and connect the electrical wires as follows (See Fig.2). Connect the black wire from the fixture to the black house (hot) wire; connect the white wire from the fixture to the white house (neutral) wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet box has a ground wire (green or bare copper), connect fixture's ground wire to it. Other wise attach the bare copper fixture wire to the green ground screw on the crossbar. Tuck the wire connections neatly into the ceiling junction box as you holding the fixture assembly toward the ceiling.
6. Finish mounting the pan (E) by placing it over both Mounting screws (A) so that the screws protrude from the keyholes in the bottom of the pan (E). Rotate the pan (E) until the screws are seated in the slots of the keyholes and tighten it with a screwdriver.
7. Install the light bulbs in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
8. Thread the long pipe (G) into the center coupling of the pan (E) and tighten it with the nut (F).
9. Put the glass shade (H) and the metal trim (I) onto the fixture (D) and protruding the long pipe (G) through the center hole of the glass shade (H).
10. Thread the lock nut (J) onto the long pipe (G), and tighten firmly with the finial (K).

Your installation is now complete. Return power to the junction box and test the fixture.

NOTICE: If you want to take off the metal trim (I), you should replace the long pipe (G) with the shorter pipe from the fixture.

Fig.1


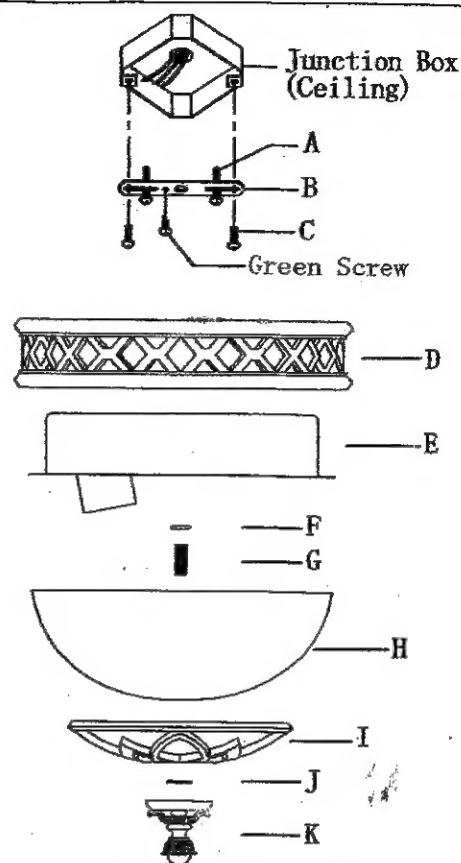


Fig.2



MIN 90°C SUPPLY CONDUCTORS

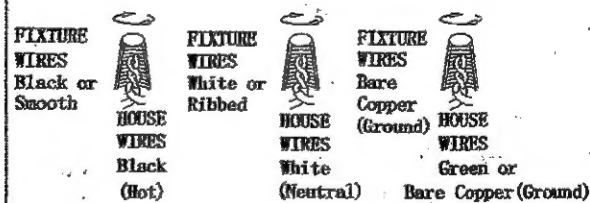

UL
Listed

american
lighting
association